



USB Series Controller Driver UCD-7610v1/ADB5F30 Instructions Manual (For designers' use)



Please ensure to read and understand this Instructions Manual before using the Product. Please keep this Instructions Manual at hand so that it is always available for reference.

MN0177-1

Introduction

This instructions manual explains the handling of "Controller Driver UCD-7610v1/ADB5F30 for 5-phase stepping motor ", emphasizing the specifications to enable proper and safe use.

The manual is thus intended for designers of control systems using stepping motors.

Before using the product, read this manual carefully for better understanding.

Keep the manual handy so that you can read it whenever you want.

The UCD-7610v1/ADB5F30 allows axes to be controlled independently and therefore referred to each axis as follows:

1st axis	2nd axis
X-axis	Y-axis

This manual basically explains only the X-axis.

Description of safety

This product must be handled correctly.

Handling the product incorrectly may cause unexpected accidents resulting in personal injuries or damage to your properties.

Many of those accidents can be avoided if you have advance information on dangerous situations. This manual provides precautions where dangerous situations are predicted. The manual provides the following alert marking and messages for this purpose:



This indicates a hazardous situation that could result in death or serious personal injury if you do not perform the procedure correctly.

This indicates a potentially hazardous situation that could result in personal injury or physical damage if you do not perform the procedure correctly.

Before use

This product is not designed for use in the equipment related to nuclear power, aerospace equipment, vehicles, marine vessels, medical equipment directly in touch with human body, equipment anticipated to give a serious impact to properties, and other equipment required to provide high reliability.

Take failsafe measures so that the whole system operates safely even if the input power causes an error, a signal line is disconnected, or the main unit fails.

This product is equipped with a LIMIT (overtravel) signal and an FSSTOP signal to prevent mechanical damage.

The initial values of these signals are set to ACTIVE OFF (B contact). Accordingly, even in a system configuration in which the FSSTOP and LIMIT signals are not used, pulses are not output unless NORMAL ON (GND connection) is enabled.

Be sure to use this product within the scope of the specifications described in this instruction manual in accordance with the specification method described therein.

Set up the product before operating it. Please refer to the Section 3, "Setting."

Please refer to separate manual "USB series device driver manual for Windows" also when you handle this product.

Introduction
Description of safety
Before use

Contents

PAGE

. Overview	
1-1. Features	5
1-2. Product configuration	3
1-3. Example of system configuration	3
1-4. Function block diagram	7
1-5. Externals of product	Э
2. Specifications	
2-1. General specifications1	1
2-2. Communication specifications1	1
2-3. Specifications 12	2
(1) Controller part 12	2
(2) Driver part 14	4
2-4. Input and output signal table 1	5
(1) USB communication connector(J1) 1	5
(2) Sensor connector(J3: X-axis, J4: Y-axis)1	5
(3) Controller power supply connector (J5) 16	6
(4) Driver power supply connector(J6: X-axis, J8: Y-axis)	6
(5) Motor connector (J7: X-axis, J9: Y-axis) 10	6
(6) General-purpose I/O connector(J10) 1	7
(7) Extend I/O communication connector(J11)1	7
2-5. Input and output specifications 18	8
(1) Output specifications 18	3
(2) Input specifications 18	3
2-6. Outside dimensions 1	9

3 . Setting

3-1. Setting	of the controller part	20
(1)	Installation of device driver for Windows	20
(2)	ID setting of the USB series (S1)	20
3-2. Setting	of the driver part	21
(1)	Description of operating	21
(2)	Setting of HOLD SWITCHING TIME SELECT(DHT SEL) switch	21
(3)	Setting of STEP ANGLE SELECT (STEP SEL) switch	22
(4)	Setting of DRIVE CURRENT SELECT (DRIVE I. SEL) switch	22
(5)	Setting of HOLD CURRENT ADJUSTMENT (HOLD I. ADJ) trimmer	22

4 . Installation and connection

4-1. Installation	23
(1) Installation distance	23
(2) Installation method	23
4-2. Connection of USB communication system	24
(1) Wiring distance of USB communication	24
(2) Connection of USB communication	24
4-3. Connection example	25
(1) Examples of connection to power supply	
(2) Examples of connection to motor	26
(3) Examples of connection to sensor(at photosensor)	27
(4) Examples of connection to general-purpose I/O	29
(5) Examples of connection to Extend I/O unit	

Contents	PAGE
5 . Applicable motor	
5-1. List of applicable motor	- 30
5-2. Torque characteristics	30
6 . Maintenance	
6-1. Maintenance and inspection	- 35
(1) Cleaning method	- 35
(2) Inspection method	- 35
(3) Replacement method	35
6-2. Saving and disposal	- 35
(1) Saving method	- 35
(2) Disposal method	- 35

The main parts which revised by this manual

1. Overview

1-1. Features

The USB series is a system controlling the stepping motor and servo motor and input/output by the USB interface that is most suitable for a small system of the PC.

- The USB series can build a motion and a system of the input/output control easily without selecting the PC.
- The shift of board controller C-VX870 series (Device-function) for PCI made of our company and the AL-(Device-function and Unit-function) is easy depending on the device driver function for Windows.

UCD-7610v1/ADB5F30 is a version up product with the UCD-7610/ADB5F30 upward compatibility.

The status of two axis batch reading and the command of two axis batch execution by the Unit-function became possible.

This Unit-function can perform a unit and USB interface by one function execution from an application. By this,

- The time crunch can be done compared with accessed Device-function of each axis and I/O-port-function of each I/O port.
- The Unit-function (writing) suppresses the difference at time until it instructs time each axis and each I/O output signal.
- The Unit-function can reduce the load of the application.
- It supports the Device-function, and can use the Device-function.
- The Unit-function can be used together with the Device-function and the I/O-function.



UCD-7610v1/ADB5F30 is equipped with our chip controller MCC to enable motor control using simple commands.

- It enables drive of two axes of 5-phase stepping motor of from 0.35 A/phase to 0.75 A/phase.
- · It enables two independent drive and two axes linear interpolation drive by an easy commands.
- After the command being executed is finished, the commands stored in the reservation register are executed sequentially. Then this function can be allowed continuous drive. (Applied function)
- The wiring working efficiency improves by an unnecessary driver all-in-one design to wire between the controller and the motor driver.

UCD-7610v1/ADB5F30 is equipped with for each two points general-purpose I/O.

In addition, UCD-7610v1/ADB5F30 connect an optional Extend I/O unit (16 points /16 points or 32 points /32 points) by the serial interface without an USB hub and add a general-purpose I/O and can control it.

1-2. Product configuration

Product name	Rating	Maker	Quantity	Remarks	
Controller	UCD-7610v1/ADB5F30	Melec Inc.	1		(Main Unit)
Connector	51103-0200	Molex	2	For driver power supply connector	(Accessory)
Connector	51103-0300	Molex	1	For controller power supply connector	(Accessory)
Connector	51103-0500	Molex	2	For motor connector	(Accessory)
Connector	51103-0600	Molex	2	For sensor connector	(Accessory)
Connector	51103-0700	Molex	1	For general-purpose I/O connector	(Accessory)
Contact	50351-8100	Molex	38	For 51103 connector	(Accessory)
Screw	M2.6 × 4	-	2	For shield cable fixation	(Accessory)

1-3. Example of system configuration





*USB series prepared connectable cables easily. Please refer to the "connection / others" instruction manual for details of connection of the USB series.

	Example of other USB series			
Power supply relay board	Controller with built-in driver	Controller for servo	General-purpose I/O	
CB-55-01/PS-T35	UCD-7613v1/GDB5F40		CB-53/1616-MIL	
4-distribution	2-axes for 5-phase	• 4-axes	Extend type	
output of DC +24 V	stepping motor	• For encoder input	In:16-points	
• 1 A/terminal	• 1.4 A/phase		Out:16-points	
(3.5 A in total)				

1-4. Function block diagram



1 USB Control block

This department is control block for USB(Full speed: 12 Mbps) communication. The USB communication interface part is insulated from power supply +24 V.

2 Serial interface control block

This department is control block for serial communication of Extend unit.

This block performs an Extend I/O unit and serial communication and can extend the I/O of 32 points /32 points input output(at the maximum) without the USB hub.

The serial communication interface part is insulated from power supply +24 V.

3 Drive control block

The drive control block outputs serial pulses to the motor driver from pulse generator MCC. (MCC is made by MELEC Inc.)

• This department detects origin sensor and a limit sensor signal and motor is controlled.

• Enables two axes independent drive or two axes linear interpolation drive.

• Enables stop two axes at immediate stop by FSSTOP signal from the outside.

To distinguish two axes, it is named X-axis and Y-axis.

4 Counter block

The counter block has two types of counters: ADDRESS COUNTER, and PULSE COUNTER. ADDRESS COUNTER, PULSE COUNTER has 32-bit counter.

These counters count pulses output by the controller.

Each counter equipped with three compare registers. These registers count optional count.

* The counter function of UCD-7610v1/ADB5F30 is specifications to count pulse of the pulse output. When the application of the counter which used an outside pulse is necessary, please examine a controller product corresponding to the outside pulse input.

5 General-purpose I/O block

This block is controlling the following input/output.

These input/output ports can control easily by I/O-function.

- General-purpose I/O area
 - ... The reading of the general-purpose Input INO signal and IN1 signal, the operation of the general-purpose output OUT0 signal and OUT1 signal are possible.
 - Moreover, enables operation as Latch signal and Clear signal of X-axis SS0 signal by the IN0 signal input. And, enables operation as Latch signal and Clear signal of Y-axis SS1 signal by the IN1 signal input.
- Extend I/O area
 - ... When the area secure an extension input/output area for 32 points /32 points input/output and access it from an application in this input/output area, the area can control input/output by an Extend I/O unit and cyclic communication.

6 Stepping motor driver block

This block which installed two axes driver can drive 5-phase stepping motors until 0.75 A/ phase.

This block can drive a stepping motor from low speed smoothly, and the resolution is possible until maximum 20,000 (pulse/revolution).

Control part and the driver part are isolated by a photocoupler.

In addition, the power supply of a stepping motor driver part and the control part is independent. This part can control the following signal from the drive control block.

- M.F ... Enables interception of the stepping motor current by M.F on/off operation of MCC SIGNAL OUT command (DRST/MF bit).
- O.H.A ... By MCC DRIVE STATUS2 PORT(DALM bit), O.H.A can detect driver overheat warning. In addition, by an MCC SPEC INITIALIZE3 command, the stop of the motor drive is possible with the detection of the driver's overheat warning.
- P.O ... The machine origin detection that used the phase out(P.O) signal of the driver for by an ORIGIN SPEC SET function is possible.

1-5. Externals of product



【Controller block】

1 J1		 This is a miniB connector to connect USB interface.
2 J3, J4		 These are connectors to connect the sensor signals such as a limit signal or the ORG signal. J3 is the one for the X-axis, and J4 is the one for the Y-axis.
3 J5		 This is a connector to connect +24 V power supply for controllers.
4 J10		 This is a connector that connects immediate stop (FSSTOP signal) and general-purpose I/O $(\overline{IN0}, \overline{IN1}, \overline{OUT0}, \text{ and } \overline{OUT1} \text{ signals}).$
5 J11		 This is a connector to connect an Extend I/O unit.
6 S1		 This is a switch which sets ID when user connects two USB series products.
Controlle (RDY)	er LED	 RDY LED(Green color) turns on at the time of RDY state the X-axis and Y-axis of each axis.
8 Cable cl	amp	 The USB cable pinching by this clamping is prevented from coming off.
9 Termina	I	 The terminal connect to the shield when the sensor cable of shield. Use the screw of attached M2 .6 \times 4.

UCD-7610v1/ADB5F30 Instructions Manual

[Driver block]	
10 J6, J8	These are connectors to connect +24 V power supply for drivers. The power shutdown can turn the power supply on and off independently of the power supply in the controller's part.
	Jo is the one for the X-axis, and J8 is the one for the Y-axis.
11 J7, J9	These are connectors to connect a motor. J7 is the one for the X-axis, and J9 is the one for the Y-axis.
12 S3, S4 S5, S6	These are switches that sets for the motor driver each. (Please refer to setting at chapter 3. for the details.) S3 and S4 are the one for X-axis. S5 and S6 are the one for Y-axis.
13,14 HOLD	These are trimmers for the HOLD current adjustment. 13 is the one for the X-axis, and 14 is the one for the Y-axis.
15 Driver LED (POWER, O.H.A)	POWER LED(Green color) turns on at the time of power on state the X-axis and Y-axis of each axis. O.H.A LED(Red color) turns on when the driver part overheats and cooling is needed. The state of O.H.A can be read from the application by the DALM signal.
16 Base installation part	These are part that fixes the main unit to the installation base. (two places) Use the M3 or M4 screw.
Connector for adjustment	This is a connector for adjustment of the main unit. Do not connect anything.
18	This is surface of heat radiation in the driver part. Set up so that this surface may stick to a metallic panel.

2 . Specifications

2-1. General specifications

No.	Item	Specifications		
1	Supply voltage	Contoroller power supply:DC +24 V (less than ± 10 % of the power supply voltage)Driver power supply:DC +24 V (less than rippled voltage 2.0 V p-p)		
2	Power consumption	Contoroller power supply :350 mA or less *1 Driver power supply *2 : • Current rating/axis at DRIVE [DRIVE I. SEL IH setting] :1.3 A/axis • Current rating/axis at HOLD [HOLD I. ADJ 40 % setting] :0.3 A/axis *1 The value when the main unit supplies the power supply for the sensor is indicated. The main unit current consumption is 110 mA. Example :at the sensor of the current consumption 25 mA (4 pieces × 25 mA × 2 axes) + 110 mA = 200 + 110 = 310 mA The totaled current consumption must not exceed 350 mA.		
3	Operating ambient temperature and humidity	 0 ~ + 40 80 % RH or less (without dew condensation) 		
4	Storage temperature and humidity	 0 ~ + 55 80 % RH or less (without dew condensation) 		
5	Installation environment	 Inside a well-ventilated cabinet installed indoor, free from direct sunlight. Not exposed to corrosive and flammable gasses, and not affected by oil mist, dust,salt, iron powder, water, and chemicals. Not subject to constant vibration or excessive shock. Not affected by electromagnetic noise caused by power equipment. Free of radioactive materials and magnetic fields, and not in vacuum. 		
6	Dimensions	W 45.7 × H 79 × D 127 (mm)		
7	Weight	Approx. 0.4 kg		

2-2. Communication specifications

No.	Item	Specifications	
1	USB interface	 Conformity standard Transmission rate Wiring distance USB connector Connection number 	:USB 2.0 (non-insulation: but there is insulation with +24 V.) :FULL SPEED(12 Mbps) :Recommendation 1 m ~ 3 m (Up to 5 m or less) :Type miniB :Up to two *1
*1 Avoid use throu The USB comm		*1 Avoid use through the hut The USB communication r	o. night become unstable according to the hub.
2	Extend interface	 Conformity standard Connection number Wiring distance/baud rate 	:RS485 (non-insulation: but there is insulation with +24 V.) :Up to one unit :1 m/5 Mbps

2-3. Specifications

(1) Controller part

Basic specifications

No.	Item	Specifications	
1	Pulse output	Output frequency	0.1 Hz to 350 kHz
	function	Acceleration/deceleration time constant	5000 ms/kHz to 0.0025 ms/kHz (Trapezoid/S-curve)
		Acceleration/deceleration shape	 Trapezoid S-curve (This feature enables to set asymmetrical shape.)
		Triangular drive prevention function	During S-shaped acceleration/deceleration drive, INDEX drive may end before the maximum speed is reached. In this event, triangular drive can be automatically avoided.
		Number of output pulses	 JOG drive : -65,535 to +65,535 pulse SCAN drive : Up to infinite pulses INDEX drive : -2,147,483,647 to + 2,147,483,647 pulses
2	Drive function	JOG drive	Pulses are constantly output until the specified pulses.
		SCAN drive	Pulses are continuously output until a stop command is detected.
		INDEX drive	Pulses are output until the specified relative or absolute address is reached.
		ORIGIN drive	The specified drive processes are performed. This drive is finished when the ORG signal specified edge is detected.
		2-axis linear interpolation drive	 Linear interpolation is performed toward the specified coordinates from the current coordinates. Driving type is selected from INDEX drive or SCAN drive. Positional errors for the specified straight line are ± 0.5 LSB. The absolute and relative addresses that can be specified for coordinates range from -2,147,483,647 to +2,147,483,647 (32 bits).
		Linear speed constant control	Control is performed to keep the synthesized speed of the two axes working for interpolation drive constant.
3	Stop function	Slow stop function	 SLOW STOP command Detection of a match of the comparator of each counter. Deceleration stop by overheating warning of driver.
		Immediate stop function	 FAST STOP command FSSTOP signal (two axes stop) Detection of a match of the comparator of each counter. Immediate stop by overheating warning of driver.
		LIMIT signal	 + direction stop Immediate stop by CWLM signal and slow stop can be selected. Slow stop or immediate stop can be performed for each axis upon detection of a match of the comparator(COMP2) of each counter. - direction stop Immediate stop by CCWLM signal and slow stop can be selected. Slow stop or immediate stop can be performed for each axis upon detection of a match of the comparator(COMP3) of each counter.
4	Counter function	ADDRESS COUNTER	32-bit counter that manages absolute addresses by counting drive output pulses.
		PULSE COUNTER	32-bit counter that counts the drive pulse output.
		Comparator function	 Detection of a match of the three comparators of each counter. Upon detection of a match by the comparator, pulse output can be decelerated and then stopped, or stopped immediately. Upon detection of a match by the comparator, status can be read.
		AUTO CLEAR function	The counter can automatically be cleared upon detection of a match of COMP1 of each counter.
		AUTO ADD function	If the counter value reaches the COMP1, a value that is set by the data add to COMPARE REGISITER1 of each counter.

No.	Item	Specifications		
5	Other	Data reading function	Current status information can be read in real time.	
	functions		Current status information includes status data, count data of a counter etc.	
		General-purpose I/O	Two points of input/output are prepared as general purpose I/O.	

Applied functions

No.	Item	Specifications	
1	Drive function	PLS INDEX CHANGE function	Upon detection of the PLS INDEX CHANGE command, the system performs PLS INDEX drive by setting the specified data at the stop position of the relative address for which the start position is the origin.
		INDEX drive control the start point at auto deceleration	This function is allowed to set OFFSET of the start point at auto deceleration. This function can be used when INDEX drive, liner interpolation and INDEX drive.
2	Counter function	Count data latch/clearance function	This function latches count data of a counter at a specific latch timing and holds it till the next latch timing. Each counter can latch counter value at arbitrary timing. It is possible to clear a counter value at the latch timing. <u>IN0</u> signal: for X-axis <u>IN1</u> signal: for Y-axis
3	Other functions	Command reservation function	 Each axis has a reservation register that can store data commands for ten instructions. General-purpose commands of drive commands can be reserved in the reservation register. After the command being executed is finished, the commands stored in the reservation register are executed sequentially. Then this function can be allowed continuous drive.
		Input signal logical switch function	 The logic of the following input signals can be changed: CWLM signal CCWLM signal FSSTOP signal

Please refer to the chapter of the USB series device driver manual application function for details of applied specification.

(2) Driver part

No.	Item	Specifications	
1	Motor output	DRIVE current: At IL 0.35 A/phase(central value)	
	current	At IH 0.75 A/phase(central value)	
		HOLD current: Approx. 40 % of DRIVE current value (factory-set)	
		Can set the DRIVE current with a DRIVE I. SEL switch in conformity to an application motor.	
		In addition, user can set the HOLD current by the fatto (approx. 20 % - 100 %) with the DRIVE	
2	Resolution of step angle (°/STEP)	0.72/ 0.36/ 0.18/ 0.072/ 0.036/ 0.018	
		Step angle is selected at switch of SA, SB, ans SC.	
		The above-mentioned resolution can be selected by this switch setting.	
3	Motor excitation	The stepping motor output current can be intercepted by the M.F signal operation from the	
	current ON/OFF	application. As a result,	
		The manual operation of the machine can be done.	
		• Generation of heat of the motor can be lowered.	
		Deterioration of the holding power with the motor may cause breakage of the machine or	
		injury Check safety before inputting	
		When this signal is input, motor torque may be lost, resulting in failure to retain the load	
		transported. In particular, this risk is high with the vertical drive (such as the Z-axis).	
4	Hold switching time	DRIVE/HOLD current automatic switching time is set up with the DHT SEL switch.	
	select	ç .	
		\cdot There is a possibility to become heat decrease of the motor when the stop time	
		of the drive is short.	
5	Warning of	When the temperature in the unit reaches at the temperature (approx. 70) for which cooling	
	overheat	is necessary, driver alarm signal (DALM) status is outputted.	
		Moreover, LED of overheating warning (O.H.A: Red color) is lighted.	
		 Consecutive driving is possible in the range where this signal is not output. 	
		 The motor output current is not intercepted at the time of ON this signal. 	
		• When DALM is enabled by the setting of the controller's department, the motor can be	
		May be fired by overheat.	
		Confirm whether apportuality occurred at the motor and the product	
		When this signal is turned on with abnormality not found, please enlarge the installation base	
		or give cooling of the forced air cooling etc.	
6	P.O. detection	The P \cap signal is generated only once in the nulse number hit that rotates by 7.2.° by setting	
0		each resolution	
		When this signal is set as a origin detection signal of the controller's department a highly	
		accurate machine origin point can be detected.	

2-4. Input and output signal table

(1) USB communication connector(J1)



Connector :USB miniB connector Recommendation cable :KU-AM5 (Made

AM5 (Made by Sanwa Supply)

: 10 = 1 m in length30 = 3 m in length

Reference

For more information about a cable preparing in the USB series and a recommended cable, refer to the instruction manual of "connection / others".

No.	Direction	Signal name	Description
1	-	V	USB bus power supply
2	I/O	-D	- side signal of the USB communication data
3	I/O	+D	+ side signal of the USB communication data
4	-	N.C	Connection is prohibited.
5	-	S.G	GND of the USB

(2) Sensor connector (J3: X-axis, J4: Y-axis)





For shield connection (M2.6 tap)

No.	Direction	Signal name	Description
1	I	CWLM	+(CW) direction LIMIT signal(B contact)
2	I	CCWLM	-(CCW) direction LIMIT signal(B contact)
3	I	NORG	Machine origin proximity signal
4	I	ORG	Machine origin signal
5	-	GND	Power supply (GND) for sensor
6	0	EXTVCOM+	Power supply (+24V) for sensor

• The sensor connector is the same terminal array in both X-axis and Y-axis.

 The default values of the LIMIT signal of each axis are ACTIVE OFF input (B contact). The pulse is not output if it doesn't connect into the status of NORMAL ON (GND connection) when signal unused.

• +24 V power supply GND and internal can be connected, and can use as power supply GND for return GND of sensor.

· GND and +24 V power supply GND is mutually connected internally.

These can be used as power supply GND for return GND and sensor.

 \cdot It can supply EXTVCOM+ as a power supply for sensor to the +24 V Max 150 mA/axis.

(There is an overcurrent protection circuit.)

• When user drops the shield of a cable for sensor, user uses a terminal in the sensor connector side, and please connect it.

(3) Controller power supply connector(J5)



	Connector	: 53426-0310 (Molex)
ide)	Conformity connector	: 51103-0300 (Molex: accessories)
	Conformity contact	: 50351-8100 (Molex: accessories)
	Conformity crimp tool	: 57295-5000 (Molex)
	Acceptable wire	: AWG28 ~ AWG22
		(Coating 1.15 ~ 1.8)
	Conformity cable	: CE-76/003C10-51103

-5000 (Molex) 28 ~ AWG22 ating 1.15 ~ 1.8) : CE-76/003C10-51103

(1 m: It is not an accessories.)

No.	Direction	Signal name	Description
1	I	+24 V	DC +24 V power supply
2	-	GND	GND of +24 V power supply
3	-	F.G	Frame GND is connected with case.

(4) Driver power supply connector (J6: X-axis, J8: Y-axis)

	Connector	: 53426-0210 (Molex)
	^{//Y} Conformity connector	: 51103-0200 (Molex: accessories)
	Conformity contact	: 50351-8100 (Molex: accessories)
	Conformity crimp tool	: 57295-5000 (Molex)
	Acceptable wire	: AWG28 ~ AWG22
1 1		(Coating 1.15 ~ 1.8)
	Conformity cable	: CE-47/002C10-51103
(Contact ins	ertion side)	(1 m: It is not an accessories.)
		· · ·

No.	Direction	Signal name	Description
1	I	+24 V	DC +24 V power supply
2	-	GND	GND of +24 V power supply

• The driver power supply is independent with the controller power supply.

• The driver power supply of X-axis and Y-axis is independent with each axis.

(5) Motor connector(J7: X-axis, J9: Y-axis)



• The motor connector is the same terminal array in both X-axis and Y-axis.

• The display according to the color is a lead wire color of motor.

(6) General-purpose I/O connector(J10)



No.	Direction	Signal name	Description
1	-	R.GND	Return GND of each signal (for +24 V interface)
2	I	FSSTOP	Immediate stop signal of both X axis and Y axis (B contact)
3	I	INO	General-purpose input_0
4	I	ĪN1	General-purpose input_1
5	0	OUT0	General-purpose output_0
6	0	OUT1	General-purpose output_1
7	-	N.C	Connection is prohibited.

• The default values of the FSSTOP signal is ACTIVE OFF input (B contact).

The pulse is not output if it doesn't connect into the status of NORMAL ON (GND connection) when signal unused.

(7) Extend I/O communication connector(J11)



Connector : 1565994-4(e-CON:Tyco Electronics) Conformity cable : CE-66-01/IO-A03(0.3 m, It is not an accessories.) : CE-66-02/IO-A10(1 m, It is not an accessories.)

No.	Direction	Signal name	Description
1	I/O	+RS485(EXT)	+ side signal of the Extend I/O serial data (line driver positive logic)
2	I/O	-RS485(EXT)	- side signal of the Extend I/O serial data(line driver negative logic)
3	-	S.G	Signal GND for Extend I/O
4	-	F.G	Frame GND is connected with case.

• Number of Extend I/O that can be connected from J11 is one unit.

R1

2-5. Input and output specifications

(1) Output specifications



(2) Input specifications



- * 1 The default value of each axis limit signal and the FSSTOP signal is the ACTIVE OFF input (B contact). The pulse is not output if it doesn't connect it in the state of NORMAL ON (GND connection) when it is signal unused.
 - The logic of B contact input can be switched to A contact input. (Applied function)
- * 2 An output electrical overload and short circuit should be careful. An internal protection circuit (fuse) is blown.

Ħ

75.3

2-6. Outside dimensions

General tolerance \pm 0.5 mm or less Externals tolerance \pm 1 mm or less



(16)

(30)

3 . Setting

3-1. Setting of the controller part

(1) Installation of device driver for Windows

Device driver for Windows and the installation of the USB driver are necessary to operate this product.

- Please refer to the installation manual attachment to a exclusive use device driver ^r MPL-36-01vx.xx/USBW32 or MPL-37-01vx.xx/USBW64 j for details of the installation method.
- The USB driver is appended with the device driver. Match and install the USB driver.

* Version No. ... Please confirm the latest version of vx.xx at the manual of the device driver.

(2) ID setting of the USB series(S1)

When user connects two USB series products, set ID by DIP switch S1. The ID setting number must set each unit of the USB series as do not overlap. Use the S1 setting=H' 0 (factory-set) when you use only one unit.



When turning on power, the setting of S1 becomes effective.
 Set switch while turning off the power supply.
 And, turn on the power supply after the setting change.

3-2. Setting of the driver part

(1) Description of operating

Operation method is the same in both X-axis and Y-axis. Turn off the power supply when you operate the switch.



Sign	Name of operation element		Description	Factory-set
1	Sub adjustmer	nt switch	Setting is prohibited. (OFF setting)	[OFF]
2	DHT SEL	HOLD SWITCHING TIME SELECT switch	Selects the automatic DRIVE/HOLD switching time.	(OFF:DH1]
З	2P	PULSE INPUT TYPE SELECT switch	Setting is prohibited. (OFF setting)	[OFF]
4	STEP SEL	STEP ANGLE SELECT switch	Selects the step angle.	SC: (OFF)
				SB: (ON)
				SA: (ON)
5	DRIVE I. SEL	DRIVE CURRENT SELECT switch	Selects the Drive Current.	(ON:IH)
7	HOLD I. ADJ	HOLD CURRENT ADJUSTMENT trimmer	Adjusts the Hold Current	[Approx. 40 %]

(2) Setting of HOLD SWITCHING TIME SELECT(DHT SEL) switch

DRIVE/HOLD current automatic switching time is set up with the DHT SEL switch.

Inputting drive pulse causes the current output to the motor to change from HOLD current to DRIVE current, which returns to HOLD current in about "t1". DRIVE current continues if pulse is input on driving-state.



The switch is factory-set to [DH1 (150 ms)].

• When time from a pulse stop to the next pulse input is short, because the supply ratio of the DRIVE current rises, motor fever may become high.

For this case, motor fever can be suppressed by setting the HOLD current switch time to fast.

· Confirm the step out doesn't occur when the motor stops with the real systems.

(3) Setting of STEP ANGLE SELECT(STEP SEL) switch

Erroneous setting may cause breakage of the machine or injury due to unexpected rotation of the motor.

Ensure correct setting.

Set the step angle required by the STEP SEL switch. The switches are factory-set to [20 divisions].

STEP SEL switch					
SC	SB	SA	Division	Step Angle (°)	* At 0.72 ° motor
ON	ON	ON	1/1	0.72	
ON	ON	OFF	1/2	0.36	
ON	OFF	ON	1/4	0.18	
ON	OFF	OFF	1/10	0.072	
OFF	ON	ON	1/20	0.036	Factory-set
OFF	ON	OFF	1/40	0.018	
OFF	OFF	ON	-	-	
OFF	OFF	OFF	-	-	

• The setting of the combination that turns off SC and SB is number of division $1/40(0.036^{\circ})$.

(4) Setting of DRIVE CURRENT SELECT(DRIVE I. SEL) switch

Erroneous setting may cause burn on the skin due to overheating of the motor.

DRIVE current is set up with the DRIVE I. SEL switch.

The switch is factory-set to [IH].

· Set the DRIVE I. SEL switch [IH/IL] to the setting specified in the table "5. Applicable motors."

(5) Setting of HOLD CURRENT ADJUSTMENT(HOLD I. ADJ) trimmer

Erroneous setting may cause burn on the skin due to overheating of the motor. Do not adjust a high value beyond the required.

HOLD current is set up with the HOLD I. ADJ trimmer. The ratio of HOLD current to DRIVE current can be selected. The trimmer is factory-set to approx. 40 %.



· HOLD current is changed relative to DRIVE current setting.

The ratio of HOLD current of 100 % represents the same as the setting for DRIVE current.

· When the trimmer is set minimum, HOLD current is approx. 20 % or less of DRIVE current.

• The greater the ratio of HOLD current grows, the more heat the motor generates when on holding-state.

4 . Installation and connection

4-1. Installation

(1) Installation distance

Secure the flow of the wind for the upper and lower right and left 10 mm or more apart and set up UCD-7610v1/ADB5F30 as follows.

- Distance when two or more is arranged.
- Distance with panel of case.
- Distance with another equipment.



(2) Installation method

Horizontal installation

Install in a metallic panel with excellent heat radiation by M3 or M4 screw.

The length of the screw must use appropriate length corresponding to the thickness of a metallic panel.



Vertical installation

Install it in a metallic panel with excellent heat radiation by M3 or M4 screw in the direction (upward) where the logo can be read. The length of the screw must use appropriate length corresponding to the thickness of a metallic panel.



The product can be prevented from falling by installing the product after a lower screw is stopped.

4-2. Connection of USB communication system

\land QAL	JTION	Operation not anticipated may cause damage of the machine and the product. Avoid the connection of method through the hub for stability of the USB series product.
🕂 QAL	JTION	Operation not anticipated may cause damage of the machine and the product. To prevent the malfunction by the noise, the USB communications cable recommends
		recommended cable.

Reference

Recommended USB cable KU-AM510 (L = 1 m) :Made of Sanwa Supply KU-AM530 (L = 3 m) :Made of Sanwa Supply

(1) Wiring distance of USB communication

The wiring distance of the USB communications cable is recommendation 1 m \sim 3 m. Use it within the range of 5 m (maximum).

Moreover, the wiring distance of Extend I/O unit is from each USB unit to 1 m or less.



(2) Connection of USB communication

Locks with a cable clamp so that a USB cable does not come off by external force.



In the USB series, the number that can be connected with one personal computer is up to two. Generally, USB is a standard with which two or more equipment can be connected with the hub. However, avoid the use of the hub because of reliability when using it in the control system. Examine our company AL- series when controlled number of axes and I/O number are insufficient.

UCD-7610v1/ADB5F30 Instructions Manual

4-3. Connection example

(1) Examples of connection to power supply





 UCD-7610v1/ADB5F30 please connect a driver power supply to a controller power supply each. The above is an example supplying +24 V power supply from the same power supply, but can intercept a driver power supply independently.

- Consider to confirm the current consumption of the wiring distance (resistance of the wire rod) and the USB series product, and for the voltage drop of wiring to fill the input power supply specification of the product the thickness of the wire rod of the power supply.
- Take general purpose I/O interface power supply from the same power supply as UCD-7610v1/ADB5F30. The Leake current flows through the protection diode of the output circuit when becoming power supply (+V) of power supply > UCD-7610v1/ADB5F30 of a general-purpose output when supplying it in the power supply besides UCD-7610v1/ADB5F30, and the input circuit of the connection destination enters the state of turning on.



(2) Examples of connection to motor

		Operation not anticipated may cause damage of the machine and the product.
\land QAL	JTION	Separate the wiring for the motor line by the following signal and 50 mm or more
		to prevent the malfunction by the noise.
		Line of another equipment.
		USB communications cable.
		Make the motor wiring within 5 m.
		USB communications cable. Make the motor wiring within 5 m.

Example 1 of connection to motor UCD-7610v1/ADB5F30 J9(X-axis), J10(Y-axis)



Example 2 of connection to motor



• The display of J9 and J10 according to the color is the lead wire colors of the motor.

 \cdot Wire the motor within 5m.

(3) Examples of connection to sensor (at photosensor)

▲ QAUTION Operation not anticipated may cause damage of the machine and the product. Separate the signal wire of each sensor by the power line and 50 mm or more to prevent the malfunction by the noise. Wire each signal within 5 m.

Example of sensor attachment(photosensor)



Example of recommended sensors

Sensor that go	bes OFF upon receipt of light	Sensor that g	oes ON upon receipt of light	Remarks
Maker	Rating	Maker	Rating	Reference: Consumptioncurrent and type
SUNX	PM- 24	SUNX	PM- 24	15 mA or less · NPN Type
	PM- 44		PM- 44	15 mA or less · NPN Type
	PM- 54		PM- 54	15 mA or less · NPN Type
	PM- 64		PM- 64	15 mA or less ⋅ NPN Type
OMRON	EE-SX910R	OMRON	EE-SX910R	15 mA or less · NPN Type

• Contact us, when you use sensors other than the above.

(Example: large 35 mA article of consumption current etc.)

Example of connection to a LIMIT sensor

The pin numbering of each axis is the same.



• The default value of the LIMIT signal is ACTIVE OFF (B contact) input.

Even when the LIMIT signal is not used, the LIMIT signal input must be connected to GND in order to output pulses.



• The ORG signal can be detected by phase output (P.O) signal in UCD-7610v1/ADB5F30. In this case, change to the setting that detects the machine origin point by the P.O signal according to the ORIGIN SPEC SET function.

(4) Examples of connection to general-purpose I/O





- The default value of the FSSTOP signal is ACTIVE OFF (B contact) input. Even when the FSSTOP signal is not used, the FSSTOP signal input must be connected to GND in order to output pulses.
- When general-purpose I/O point is insufficient, Extend I/O unit can be connected from UCD-7610v1/ADB5F 30.

(5) Examples of connection to Extend I/O unit

One Extend I/O unit can be connected from the J11 connector of UCD-7610v1/ADB5F30 without the hub etc.

Please refer to the manual for details about an Extend unit.

5 . Applicable motor

5-1. List of applicable motor

UCD-7610v1/ADB5F30 can drive a 5-phase stepping motor with 0.35 A/phase and 0.75 A/phase.

Shape	ORIENTAL MOTOR Co., Ltd.	Basic angle(°)	Current(A/phase)	DRIVE I.SEL switch	Torque Data Fig. No.
	PK543-A(B)	0.72	0.75	ON (IH)	Fig. 1
42	PK544-A(B)	0.72	0.75	ON (IH)	Fig. 2
	PK545-A(B)	0.72	0.75	ON (IH)	Fig. 3
60	PK564-A(B)	0.72	0.75	ON (IH)	Fig. 4
60	PK566-A(B)	0.72	0.75	ON (IH)	Fig. 5

Shape	SANYO DENKI Co., Ltd.	Basic angle(°)	Current(A/phase)	DRIVE I.SEL switch	Torque Data Fig. No.
	103F3505-3241(3211)	0.72	0.35	OFF (IL)	Fig. 6
20	103F3505-7441(7411)	0.72	0.75	ON (IH)	Fig. 7
20	103F3515-3241(3211)	0.72	0.35	OFF (IL)	Fig. 8
	103F3515-7441(7411)	0.72	0.75	ON (IH)	Fig. 9
	103F5505-7241(7211)	0.72	0.75	ON (IH)	Fig. 10
42	103F5508-7241(7211)	0.72	0.75	ON (IH)	Fig. 11
	103F5510-7241(7211)	0.72	0.75	ON (IH)	Fig. 12

Shape	TAMAGAWA SEIKI Co., Ltd.	Basic angle(°)	Current(A/phase)	DRIVE I.SEL switch	Torque Data Fig. No.
20	TS3682N1(N11)	0.72	0.35	OFF (IL)	Fig. 13
20	TS3682N2(N12)	0.72	0.35	OFF (IL)	Fig. 14
24	TS3664N1E2(N11E2)	0.72	0.75	ON (IH)	Fig. 15
24	TS3664N2E4(N12E4)	0.72	0.75	ON (IH)	Fig. 16
Factory Setting				ON (IH)	-

() : Both axes

5-2. Torque characteristics

Representations in the torque characteristics table are made in terms of the motor rotation (s - 1) vs. torque $(N \cdot m)$. Motor rotation (s - 1) and drive pulse frequency (Hz) are converted as follows:

Motor rotation(s ⁻¹) × $\frac{360^{\circ}}{\text{Step angle}}$ =	Drive pulse frequency (Hz)
--	----------------------------

 \cdot Maximum value of the rotate speed is 100s $^{\text{-1}}$ at 0.72 $^\circ$ $\,$ motor.

The Maximum Starting Pulse Rate is represented as "fs" by the value at zero inertial load.

Upon operation, provide adequate allowance for torque.

The stepping motor may attain high temperature, depending on the operational conditions. Use the stepping motor according to the Instructions Manual produced by motor-makers.

【ORIENTAL MOTOR Co., Ltd.】













[SANYO DENKI Co., LTD.]





INPUT CURRENT

0.1

0.02



1

10

100

(S⁻¹)

fs









0.06

[SANYO DENKI Co., LTD.]



【TAMAGAWA SEIKI CO., LTD.】



24







6 . Maintenance

\land QAL	JTION	Incorrect handling may lead to an electric shock. Inspection and maintenance need to be conducted by an expert engineer only. Before inspecting and maintaining this product, turn off the power
\land QAL	JTION	An electric shock, injuries, and fire may be caused. Do not make repair and modification such as product disassembly and parts replacement.

6-1. Maintenance and inspection

(1) Cleaning method

- To use the product in a favorable condition, conduct cyclic cleaning as follows.
 - During the cleaning of the connector terminal plating part, wipe it with a dry, soft cloth.
 - If stain is not removed by the dry wiping, soak a cloth in a solution in which neutral detergent is diluted, wring it out, and wipe off the stain with it.
 - $\boldsymbol{\cdot}$ Do not use a high-volatile solvent such as benzene and thinner, and a wipe.

This may deteriorate gold plating by transformation and oxidation.

(2) Inspection method

To use the product in a favorable condition, conduct periodic inspection.

Usually conduct the inspection every six months or every year.

To use the product in an extremely hot and humid or dusty environment, shorten the inspection interval.

Inspection item	Inspection details	Criteria	Inspection method
Environment state	Check whether ambient and intra-device temperatures are appropriate.	0 ~ + 40	Thermometer
	Check whether ambient and intra-device humidifies are appropriate.	10 % ~ 80 % RH (without dew condensation)	Hygrometer
	Check whether dust is deposited.	No dust	Visual check
Installation state	Check whether the product is firmly secured.	Not loose (6 kg· cm)	Torque wrench
	Check whether connectors are completely inserted.	Not loose and removed	Visual check
	Check whether cables are to be removed.	Not loose and removed	Visual check
	Check whether connecting cables are to be broken.	Appearance is normal.	Visual check

(3) Replacement method

If the product becomes faulty, repair it immediately because the entire device system may be affected.

To make the repair smoothly, a spare product should be prepared.

- · To prevent an accident such as an electric shock during replacement, stop the device and turn off the power.
- If poor contacting is assumed, wipe contacts with a clean cotton cloth that is wet with industrial alcohol.
- · Take a record of switch settings during replacement and return them to their state before the replacement.
- · After the replacement, confirm that the new product is normal.
- For the faulty product replaced, have it repaired by returning it to the company with a report indicating as much details on the failure as possible.

6-2. Saving and disposal

(1) Saving method

Save the product in the following environment.

- · Indoor (place in which the product is not in the path of direct sunlight.)
- Place at ambient temperature and humidity within the specifications.
- Place free of corrosive and inflammable gases.
- Place free of dust, dirt, salt, and iron powder.
- · Place free of direct vibration and shock to the product body.
- Place free of water, oil, and chemicals droplets.
- · Place where a person cannot ride or put objects on the product.

(2) Disposal method

Handle the product as industrial waste.

The main parts which revised by this manual

Parts	Content
P18	 【R1】 The Polyswitch of a protection circuit is revised at a fuse.

Technical Service Sales and Service

TEL. (042)664-5384 FAX. (042)666-2031 E-mail s-support@melec-inc.com

Melec Inc.

516-10, Higashiasakawa-cho, Hachioji-shi, Tokyo 193-0834, Japan www.melec-inc.com

This Operating Manual is subject to change without prior notice for the purpose of product improvement.